

QUICK GUIDE


Connecting your Aina PTT Wired Voice Responder to Zello (Android) (EN)



A

Connecting Aina PTT Wired Voice Responder to your Android device via USB-C cable

1. Ensure that Wired Voice Responder is turned off.
2. Turn on your Wired Voice Responder into Zello mode by pressing first multifunction, and then power button, and keep pressing buttons simultaneously for 6 second*.
3. Start Zello application from your Android device.
4. Connect Wired Voice responder USB-C cable to your Android device.
5. When phone indicates USB connection request, set "Always allow" to active, and then select "OK".

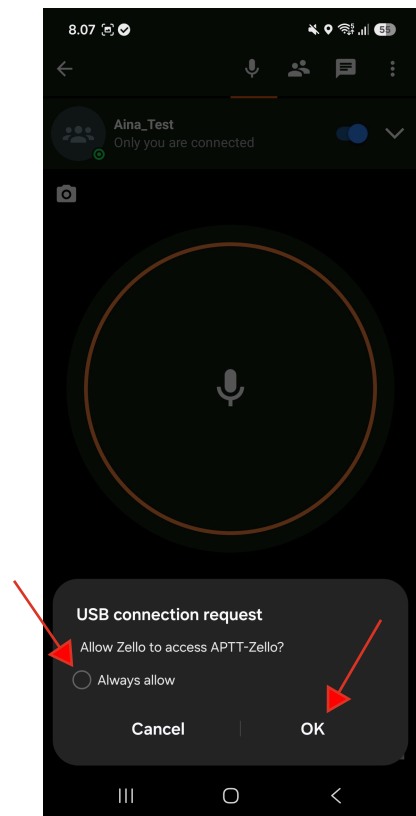

*NOTE:

Mode change has to be performed only one time for Wired Voice Responder. Repeating steps 1, and 2 will toggle between Aina mode and Zello mode.


B

Setting up your Aina PTT Wired Voice Responder to Zello


After having connected the Wired Voice Responder to your Android device, follow these steps:

1. In the Zello application, select the three vertical dots displayed on the top right corner, and then select Options.
2. Select 'Settings'.
3. Select 'Push-to-talk buttons'.
4. Select '+' symbol.
5. Press PTT1 or PTT2 button on your Wired Voice Responder to connect to the Zello application.
6. You have successfully added your Wired Voice Responder when it appears on the list as 'Aina'.


1.

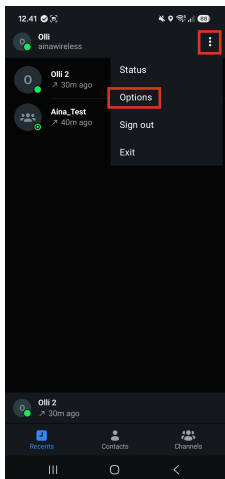


2.

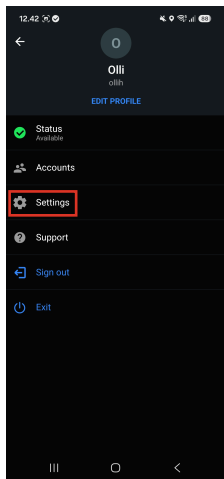


3.

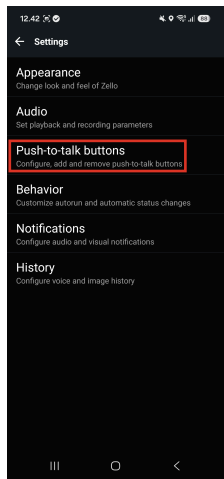


4.

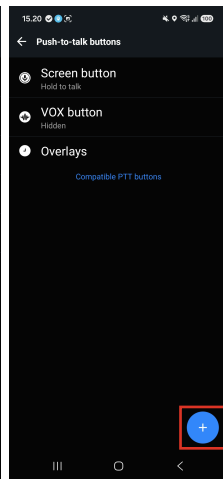

5.

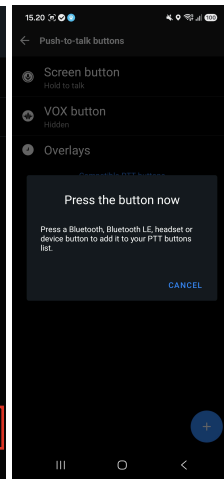

6.

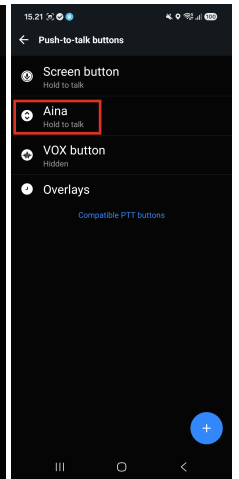

NOTE:

Step A have to be made only one time for Wired Voice Responder.

Step B have to be made only one time for every Android device that uses Wired Voice Responder.


C

Functions available

PTT1/PTT2 button – Press and hold to speak to chosen contact/channel. Release when you are done.

You can assign both the PTT1 (Primary) and PTT2 (Secondary) button to a specific channel or contact by going to: Options > Settings > Push-to-talk buttons > selecting your Wired Voice Responder 'Aina' > selecting a primary and/or secondary button contact > contact / channel.

6. 7. 8. 9. 10.

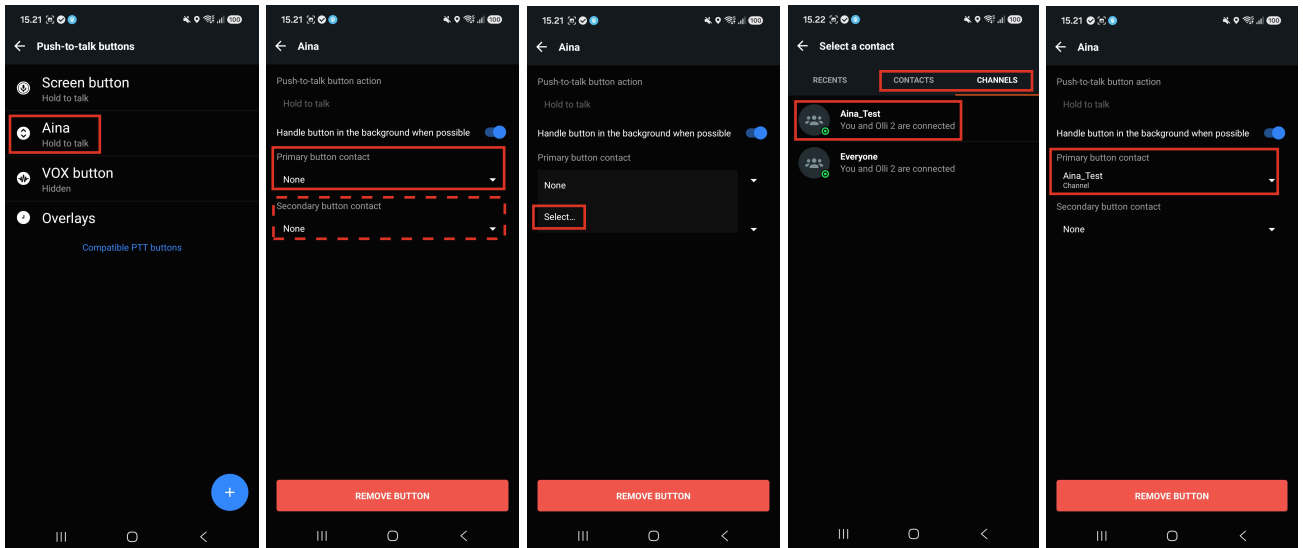

Arrow buttons – Press either arrow button to change contact/channel (incl. channel announcements). One of the button (primary / secondary) has to be set to 'None' to support this functionality.

Emergency button – Press to send an emergency alert to selected emergency channel.

Visit www.ainaptt.com to find additional accessories, an extended user manual of the Aina PTT Wired Voice Responder and more user guides. If you have any further questions, you can also email us at: sales@ainaptt.com